



Square D™ Mono-Flat Covers

A new high-end alternative
for load center covers

Unique features

- Aesthetically pleasing design for all load center applications
- Low profile surface cover with concealed hardware, trim mounting screws and door hinges
- Easy to install utilizing the EZ hang bracket
- Double door latches standard on 60 space load center covers
- Deadfront design makes servicing load center easier
- Available in gray and white for QO™ load centers and gray only for Homeline™ load centers
- Type 1
- Field installable lock kit available, order catalog number PK4FL



se.com/us/digestplus

Authorized Partner



Life Is On



Specifications

Covers for QO Load Centers				
Catalog number	Spaces	Color	Mechanical specs	
			W x H x D (mm)	W x H x D (in)
QOCMF30UC	30	Gray	394.2 x 797.1 x 26.4	15.52 x 31.38 x 1.04
QOCMF30UCW	30	White	394.2 x 797.1 x 26.4	15.52 x 31.38 x 1.04
QOCMF42UC	42	Gray	394.2 x 1003.6 x 26.4	15.52 x 39.51 x 1.04
QOCMF42UCW	42	White	394.2 x 1003.6 x 26.4	15.52 x 39.51 x 1.04
QOCMF54UC	54	Gray	394.2 x 1029.2 x 26.4	15.52 x 40.52 x 1.04
QOCMF54UCW	54	White	394.2 x 1029.2 x 26.4	15.52 x 40.52 x 1.04
QOCMF60UC	60	Gray	394.2 x 1081.8 x 26.4	15.52 x 42.59 x 1.04
QOCMF60UCW	60	White	394.2 x 1081.8 x 26.4	15.52 x 42.59 x 1.04

Covers for QO Wide Gutter Load Centers				
Catalog number	Spaces	Color	Mechanical specs	
			W x H x D (mm)	W x H x D (in)
NQC20FWG	20	Gray	394.2 x 561.34 x 26.4	15.52 x 22.10 x 1.04
NQC20FWGW	20	White	394.2 x 561.34 x 26.4	15.52 x 22.10 x 1.04
NQC30FWG*	30	Gray	394.2 x 788.41 x 26.4	15.52 x 31.04 x 1.04
NQC30FWGW*	30	White	394.2 x 788.41 x 26.4	15.52 x 31.04 x 1.04

Covers for Homeline Load Centers				
Catalog number	Spaces	Color	Mechanical specs	
			W x H x D (mm)	W x H x D (in)
HOMCMF60UC	60	Gray	394.2 x 1273.6 x 26.4	15.52 x 50.14 x 1.04

Accessories		
Catalog number	Description	
PK4FL	Door Lock Kit	

*CANNOT be used when panel has been converted to main circuit breaker panel.



QOMF42UCW




QOMF42UC

Mono-Flat Covers

Simple Installation

1. Install Mounting Brackets
2. Install Deadfront
3. Mount Trim with EZ-hang bracket
4. Install Trim Screws
5. Installation Complete

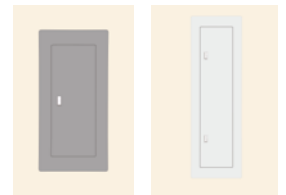

Monterey & Salinas
<https://cedcentralcoast.com>
(831) 899-7544
customerservice@cedmonterey.com

Authorized Partner



se.com/us/digestplus

Life Is On



Boston One Campus
 800 Federal Street
 Andover, MA 01810